

pogee ampus elev deo gtal evœ ude

ackg ou d



ow o et p my ca g fo a els (These settings will vary depending on the TV make and model)

- 1. Press the "Power" button to turn on the TV and press the "Menu" Button
- 2. Select "Set-y o # and Set "Signal Type/" #
- 3. o "h "u "Note: auto-programming may take up to 60 minutes

о у

- 1. Press the "Menu" button on the remote control
- 2. Select Settings
- 3. Select Auto Program under Channel Settings
- 4. Press the "Last" button repeatedly to exit the menu system
- 1. Press the "Menu" button on the remote control
- 2. Select "Initial Setup"
- 3. Select "Broadcasting Setup" and press "Enter"
- 4. Select "CH Search" and press "Enter"
- 5. Select "Analog and Digital Search Start

ΖO

- 1. Press the "Menu" button on the remote control
- 2. Open the "TV" menu and select "Tuner Mode"
- 3. Select "Cable" for the "Tuner Mode" setting
- 4. Select "Auto Search"

amsu q

- 1. Press the "Menu" button on the remote control
- 2. 0 #
- 3. Select Auto Program press "Enter"
- 4. Select otandard he type of signal broadcast
- 5. Use the direction button to select Next and press "Enter"

y telev so does ot appea to be wo k gp ope ly w at sould do

- 1. Ensure the cable is tightly connected from the port on the wall to the input on your TV or, if applicable, external QAM tuner
- 2. If applicable, connect the external QAM tuner to the TV
- 3. Run a channel scan as described above (Expect 125 channels between 2-85)
- 4. Verify that your TV has the proper QAM tuner, see the list below or search the specifications section of your TV manual. If you no longer have your TV manual, locate the make and model of the TV and lookup the specs online (See our list below)
- 5. If your TV does not have a QAW2M(q0.000r692 reWħBT/F.0x0912 0 612)]a 2 792 reWħBT/F1 9.96 Tf1 0 0 1 72.024 427.27 Tm0 g0 G